


Muse Core Quick-Start Guide

A. Machine Assembly

- When moving the unit make sure you have a lifting partner as the laser system is over 50lbs.
- Place the Muse Core unit on a sturdy table and remove the zipties from the belts.
- Attach the ducting collar using the flange bolts. Secure one of the ducting tubes to the collar and the exhaust fan, while the other is secured from the exhaust fan to your choice of ventilation.
- For Coolbox:**
Attach each of the water hoses to the water in and out cones on the Coolbox. Connect the tubing to the machine (**In to Out, Out to In**).
- Attach the air tubing to the air out hose on the Coolbox and to the Air Control on the Core.
- Fill the Coolbox with 1.5 liters of Distilled water.

- For Hobby Kit:**
The water out tube goes into a water bucket while water in tube goes to the water pump.
- Attach the air tubing to the air out hose on the Air Compressor and to the Air Control on the Core.
- Fill the water bucket with 3 gallons of distilled water.
- It's recommended to run the water for 1min before starting to clear the tube of air bubbles.

Connect the power cable. Power on laser.

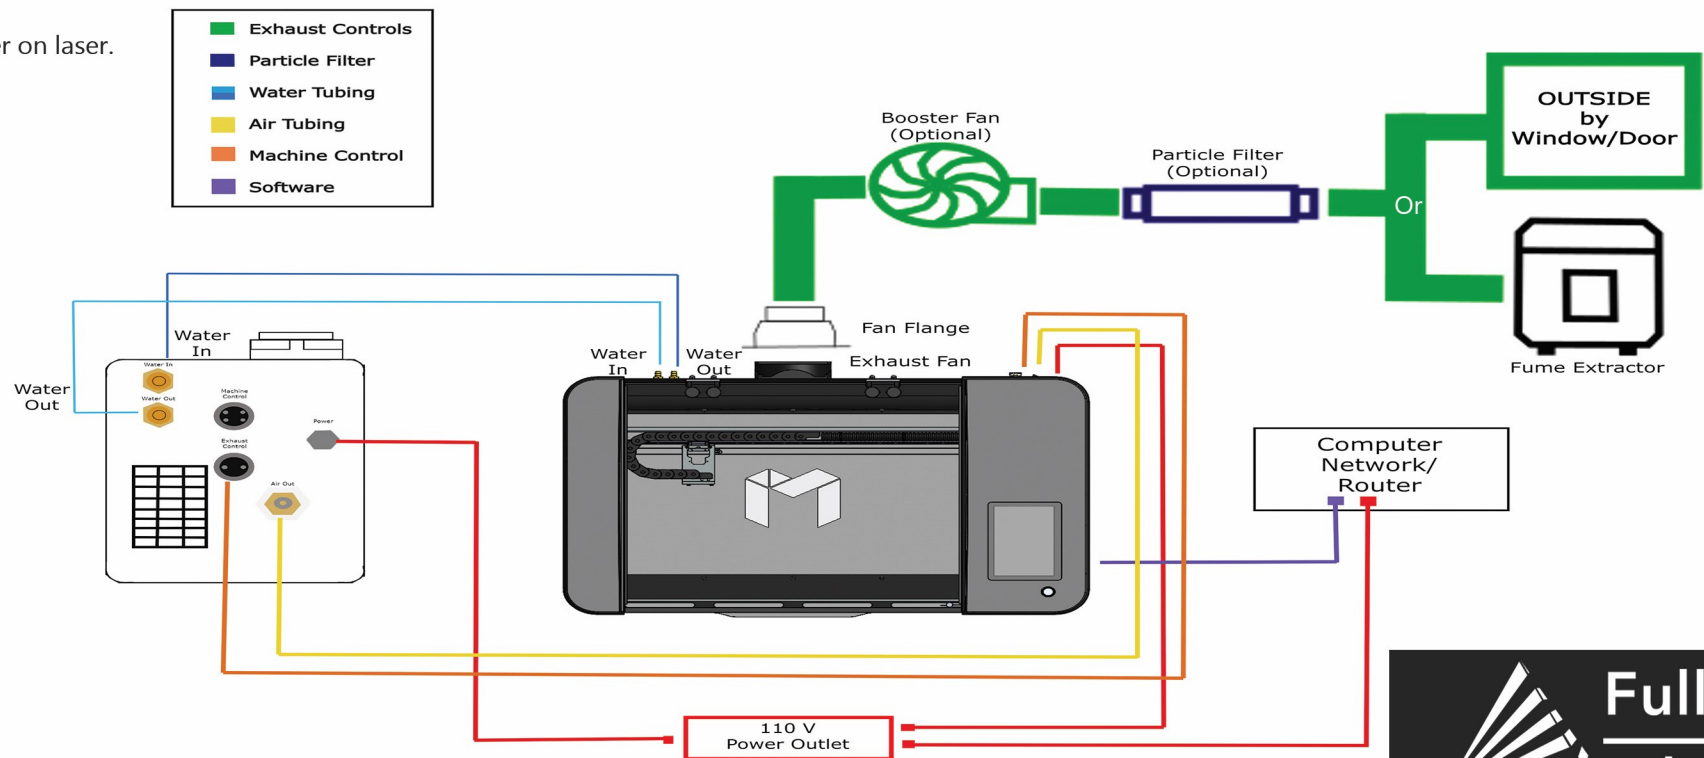

B. Connecting to the Laser

- You can connect to your laser in 3 different ways.
- Wi-Fi Connection**
Connect the Wi-Fi USB Adapter to the USB port on the rightside of your machine. From the touchscreen navigate to the network menu and look for your Wi-Fi. Follow the prompts to connect.
- Networked Ethernet**
Connect the Ethernet cable to the rear of your router/modem. If it isn't near your laser workspace you may want to obtain an ethernet cable of appropriate length. Connect the other end to the ethernet port on the side of your machine.
- Direct Connect Ethernet**
Connect one end of the Ethernet cable to the port on the side of the machine and the other end to the ethernet port on your computer. Some computers may require an Ethernet to USB adapter.

Once you've got a connection method, go to the touchscreen on your laser. At the top will be a blue bar with your network type and a number similar to 000.000.0.00. Open a browser and input that in the URL bar to access RE3 to control your laser.

C. Focusing you Laser

- Provided with your laser is a focusing billet. This billet will be used each time you switch to a new material.
- Align your material in your work area.
- Place the billet on the material.
- Move your laserhead until it's over the billet.
- Loosen the laserhead using the side knob until the laserhead rest on top of the focusing material.
- Tighten the knob and remove the bullet.
- Your laser is now ready to start engraving.

Safety Guidelines

The following safety guidelines are meant to highlight the most common safety violations. Use of controls or procedures other than those specified may result in hazardous radiation exposure, fires, or electric shock. Please see your laser's manual for a complete listing of safety protocol.

General Safety

- Never** Leave laser unattended while running.
- Always** keep machine on a clean, level, and open workspace free of clutter; that is classified to hold its weight.

Fire Safety

- Keep** laser system and workspace clear and clean of debris.
- Make sure** you have a 5lb or larger fire extinguisher outside of risk area. Full Spectrum Laser recommends Halotron extinguishers for ease of cleanup. Dry chemical extinguishers are also effective.
- Keep** a first aid kit outside of risk area designed for burn and smoke inhalation treatment.

Laser Safety

- Never** cut unknown material, always check MSDS for any hazards.
- Always** have proper ventilation and exhaust
- Do not** look directly into the beam.
- Be Aware** that modification or disassembly can expose a Class 4 laser system or high voltages which can increase the risk of harm or fire.

Electrical Safety

- Power Cut Off** can be controlled from the switch at the back of the machine. To power on press the (-) side down, to power off press the (o) side down. You can also unplug the machine from either the rear or it's outlet.
- Do not** make or break any electrical connections when the unit is powered on.
- Do not** access or tamper with any electronics unless specifically directed to by support.

For Complete Manual go to: fslaser.com/resources/



Full Spectrum
LASER

Support
M-F 8am to 5pm (PMT)
support@fslaser.com
702.802.3103

Sales
M-F 8am to 5pm (PMT)
sales@fslaser.com
702.802.3101